



1 _____
Place the reference clips to the front side and screw in.

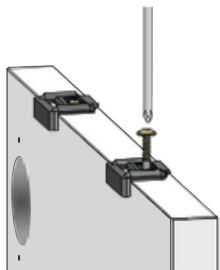


2 _____
Remove references, to leave clips attached

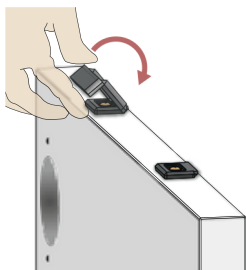

3 _____
Apply adhesive to the profile



4 _____
Clip the handle on from the front side.

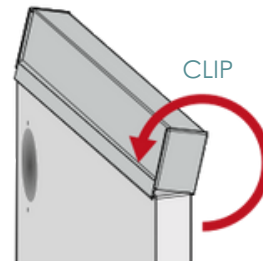


5 _____
Push handle down towards the back side until you hear a click from the clips!


Measurements to consider

Handle length - number of clips

Components

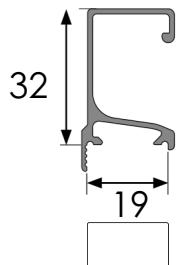

Door's thickness 19 mm

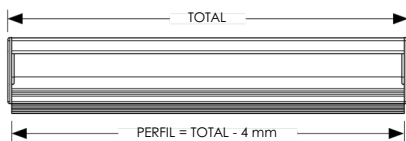

Cote de profil | Profile Cut | coupe du profil = TOTAL - 4 mm

- 2 clips — handles under 700 mm
- 3 clips — handles from 800 up to 1600 mm
- 4 clips — handles longer than 1700 mm



Aluminum profile



Caps



Clips

Montaje de terminales | End caps assembly

Assemble end caps using a rubber mallet to avoid damages

